

## National Child Passenger Safety Certification Training Program

### Install a Locking Clip



1. While applying your weight on the seat with your arm, buckle and tighten the lap-shoulder seat belt.




2. Pinch and hold the lap and shoulder belts together.



3. Unbuckle the belt.



4. Place the locking clip no more than 1 inch away from the latchplate as noted in the car seat and vehicle owner's instruction manuals.

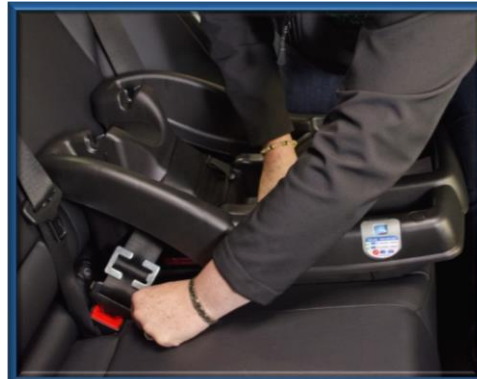

5. Apply pressure on the seat and re-buckle the seat belt.



6. Test the car seat to make sure it moves no more than 1 inch side-to-side or front-to-back when testing at the belt path.

- You can remove the locking clip by pinching the webbing in half so the locking clip falls off.

